

Federal Communications Commission

§ 11.20

(1) A “wireless cable system” is a collection of channels in the BRS or EBS used to provide video programming services to subscribers. The channels may be licensed to or leased by the wireless cable system operator.

(2) A “wireless cable operator” is the entity that has acquired the right to use the channels of a wireless cable system for transmission of programming to subscribers.

(d) Local franchise authorities may use any EAS codes authorized by the FCC in any agreements.

(e) Other technologies and public service providers, such as low earth orbiting satellites, that wish to participate in the EAS may contact the FCC’s Public Safety and Homeland Security Bureau or their State Emergency Communications Committee for information and guidance.

[63 FR 29662, June 1, 1998, as amended at 65 FR 7639, Feb. 15, 2000; 65 FR 21657, Apr. 24, 2000; 65 FR 30001, May 10, 2000; 65 FR 34406, May 30, 2000; 67 FR 18506, Apr. 16, 2002; 69 FR 72031, Dec. 10, 2004; 70 FR 19315, Apr. 13, 2005; 70 FR 71031, Nov. 25, 2005; 71 FR 76220, Dec. 20, 2006; 72 FR 62132, Nov. 2, 2007; 77 FR 16699, Mar. 22, 2012]

§§ 11.12–11.14 [Reserved]

§ 11.15 EAS Operating Handbook.

The EAS Operating Handbook states in summary form the actions to be taken by personnel at EAS Participant facilities upon receipt of an EAN, an EAT, tests, or State and Local Area alerts. It is issued by the FCC and contains instructions for the above situations. A copy of the Handbook must be located at normal duty positions or EAS equipment locations when an operator is required to be on duty and be immediately available to staff responsible for authenticating messages and initiating actions.

[70 FR 71033, Nov. 25, 2005]

§ 11.16 National Control Point Procedures.

The National Control Point Procedures are written instructions issued by the FCC to national level EAS control points. The procedures are divided into sections as follows:

(a) *National Level EAS Activation*. This section contains the activation and

termination instructions for Presidential messages.

(b) *EAS Test Transmissions*. This section contains the instructions for testing the EAS at the National level.

(c) *National Information Center (NIC)*. This section contains instructions for distributing United States Government official information messages after completion of the National Level EAS activation and termination actions.

[59 FR 67092, Dec. 28, 1994, as amended at 67 FR 18508, Apr. 16, 2002]

§ 11.18 EAS Designations.

(a) National Primary (NP) is a source of EAS Presidential messages.

(b) Local Primary (LP) is a source of EAS Local Area messages. An LP source is responsible for coordinating the carriage of common emergency messages from sources such as the National Weather Service or local emergency management offices as specified in its EAS Local Area Plan. If it is unable to carry out this function, other LP sources in the Local Area may be assigned the responsibility as indicated in State and Local Area Plans. LP sources are assigned numbers (LP–1, 2, 3, etc.) in the sequence they are to be monitored by other broadcast stations in the Local Area.

(c) State Primary (SP) is a source of EAS State messages. These messages can originate from the Governor or a designated representative in the State Emergency Operating Center (EOC) or State Capital. Messages are sent via the State Relay Network.

(d) State Relay (SR) is a source of EAS State messages. It is part of the State Relay Network and relays National and State common emergency messages into Local Areas.

(e) Participating National (PN) sources transmit EAS National, State or Local Area messages. The EAS transmissions of PN sources are intended for direct public reception.

[59 FR 67092, Dec. 28, 1994, as amended at 77 FR 16700, Mar. 22, 2012]

§ 11.20 State Relay Network.

This network is composed of State Relay (SR) sources, leased common carrier communications facilities or