


ECI-60 And JSD-80 USB Windows 7 Settings

Windows 7 requires drivers to be digitally signed for them to function. The operating system will block their use as shown; the status of the driver will indicate the “Not digitally signed” status.

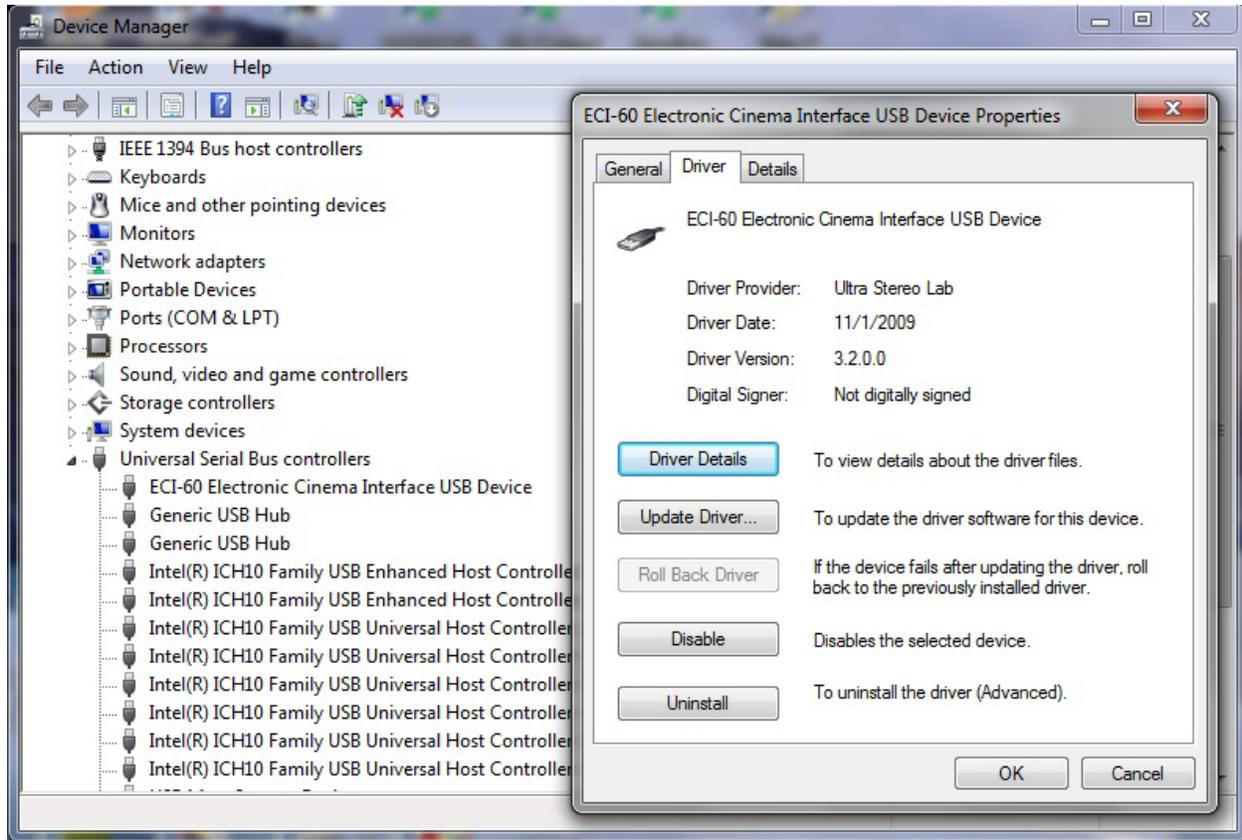

To allow non-digitally signed drivers to function the user must use the Windows 7 Advanced Boot Options menu. The menu can only be activated during Windows startup by pressing the F8 function key. From this menu select the “Disable Driver Signature Enforcement” option by using the Up/Down arrows. Then press the enter key and Windows startup will resume.

The ECI-60, JSD-80, and XTD-680 use non-digitally signed drivers and will require the user to disable signature enforcement.