



Using the EP-100

The EP-100 is a battery maintainer for an Enigma board. The EP-100 provides 12V to the board, while asserting RESETZ and holding the marriage and service door switches appropriately to minimize battery drain. This allows an Enigma board to be stored with minimal drain to the battery, prolonging the useful life of an Enigma board.

To use the EP-100:

1. Install Enigma onto EP-100.
2. Plug Power cord into Enigma board.
3. Plug Power cord into wall outlet.

An Enigma board must not be installed in EP-100 while powered. Unplug the EP-100 power cord before plugging an Enigma board into the EP-100.

Note that steps 2 and 3 can be done in any order.

