



HSW-602

HDMI Matrix Switch

Installation and User Manual

USL Inc.

1.0 Overview

Introduction

The HSW-602 is the USL solution for multiple HDMI source playback in movie theaters and large venue presentations. The HSW-602 is a 6-in-2-out HDMI switching device, with S/PDIF audio output over TOSLINK and Coaxial connections. The HSW-602 can also overlay audio from an XLR or TLR 3.5mm source onto the AES/EBU audio output for expanded presentation functionality. The HSW-602 is designed specifically to interface with today's Digital Cinema Projectors and Media Servers, providing ICP blanking for clean transitions, Ethernet automation commands for seamless integration, and AES/EBU audio output to cinema audio processors.

Note:



Table of Contents

1.0 OVERVIEW	2
INTRODUCTION	2
TABLE OF CONTENTS	3
CONFORMANCE DECLARATIONS	4
<i>Europe Union (CISPR 22)</i>	4
<i>FCC</i>	4
<i>Canada</i>	4
IMPORTANT SAFETY INSTRUCTIONS.....	5
<i>Product End of Life Information</i>	5
PRODUCT CONTENTS.....	5
PRODUCT SPECIFICATIONS.....	6
<i>HDMI Compliance Specifications</i>	7
<i>Front Panel Descriptions</i>	8
<i>Rear Panel Descriptions</i>	9
2.0 SETUP	10
INSTALLATION	10
LOCATE ON NETWORK.....	10
3.0 OPERATION	11
FRONT PANEL CONTROLS.....	11
AUTOMATION	11
4.0 WEB INTERFACE	13
INPUT CONTROL	14
AES AUDIO MIXING.....	14
SETTINGS	15
<i>Labels</i>	15
<i>Network</i>	16
<i>Projector</i>	17
<i>Update</i>	18
<i>Restore Factory Settings</i>	19
5.0 PRODUCT SUPPORT	19
LIVE LOGGING	19
CONTACT USL	19
USL ONE YEAR LIMITED WARRANTY.....	20
APPENDIX A – AUTOMATION COMMANDS	21
APPENDIX B – AUDIO CONNECTOR PINOUTS	24
APPENDIX C – GPIO PINOUT	25

Conformance Declarations

Europe Union (CISPR 22)

The USL HSW-602 complies with the EMC requirement of EN55022 and EN55024 when operated in accordance with this manual.

Warning: This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

Canada

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil de la classe A est conforme à la norme NMB-003 de Canada.

Important Safety Instructions

1. Read and keep these instructions.
2. Do not use this apparatus near water.
3. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
4. Clean only with dry cloth.
5. Only use attachments/accessories specified by the manufacturer.
6. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
7. This equipment is intended for installation in a restricted access location.

Caution: Troubleshooting must be performed by a trained technician. To reduce the risk of electric shock, do not attempt to service this equipment unless you are qualified

Product End of Life Information



This product was designed and built by USL to provide many years of service, and is backed by our commitment to provide high-quality support. When it eventually reaches the end of its serviceable life, it should be disposed of in accordance with local or national legislation.

Product Contents

- HSW-602 HDMI Switch
- HSW-602 Power Supply
 - Type UL Plug (USA/CA)
 - Type VDE Plug (EU)
 - Type SAA Plug (AUS/NZ/CN)
 - Type UK Plug (UK)
- Documentation
 - Installation and User Manual

Product Specifications

The HSW-602 is a 1U 19-inch rack mount device. It is a steel chassis with chassis grounding. The device is connected with:

- **1 12V 1.0A DC power input (AC adapter provided)**
- **6 HDMI inputs**
- **2 HDMI outputs**
- **1 RJ45 Ethernet Connector**
- **1 RJ45 Digital AES/EBU 8 channel input**
- **1 RJ45 Digital AES/EBU 8 channel output**
- **1 RCA Coaxial audio output (S/PDIF)**
- **2 TOSLINK optical audio output (S/PDIF)**
- **1 TRS/XLR-3 combo input jack (Mic)**
- **1 TLR 3.5mm stereo input (Line-in)**
- **1 RJ45 GPIO Connector**

Ethernet connection provides access the HSW-602 Web Interface for control, setup and updating of the HDMI switch. TCP/IP commands are accepted through port 10001 on the Ethernet interface, and Telnet connections to port 23 are supported for live logging of operations.

AES output includes channel mixing of the Mic and Line-in inputs, with 0 centered gain control for each input, to support overlay of microphones and alternative sources with the audio playback.

TOSLINK and Coaxial audio supports 2 channel S/PDIF audio output and pass through of bitstream audio data.

Microphone input supports passive balanced audio sources. No phantom power is supplied.

Line-in supports stereo 2 channel audio, 300mV peak unbalanced.

HDMI Compliance Specifications

All HDMI connections comply with HDMI 1.4b and HDCP 1.2 specification. All feature support for HDMI spec 1.4b and outlined in the table below. HDMI video is not scaled by the HSW-602.

Feature	1.4b Support
sRGB	Yes
YCbCr 4:2:2/4:4:4	Yes
8 channel LPCM, 192 kHz, 24-bit audio capability	Yes
Blu-ray Disc and HD DVD video and audio at full resolution	Yes
Consumer Electronic Control (CEC)	Yes
DVD-Audio	Yes
Super Audio CD (DSD)	Yes
Deep color	Yes
xvYCC	Yes
Auto lip-sync	Yes
Dolby TrueHD bitstream capable	Yes
DTS-HD Master Audio bitstream capable	Yes
Updated list of CEC commands	Yes
3D over HDMI	Yes
Ethernet channel	Yes
Audio return channel (ARC)	Yes
4K resolution at 30 fps	Yes
4K resolution at 60 fps	No
Rec. 2020 color space	No
YCbCr 4:2:0	No
32 channel audio	No
1536 kHz audio	No
4 audio streams	No
2 video streams (Dual View)	No
21:9 aspect ratio	No

TABLE 1 - HDMI 1.4B FEATURE SUPPORT

Front Panel Descriptions

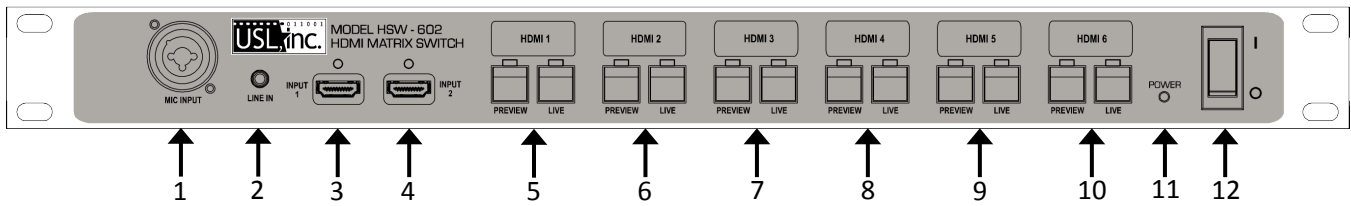


FIGURE 1 - HWS-602 FRONT PANEL

- 1 XLR/TRS Combo Jack**
Insert microphone to overlay voice onto live HDMI Source. (AES Output Only)
- 2 Line In**
3.5 mm line level feed to overlay onto live HDMI Source. (AES Output Only)
- 3-4 HDMI Source Input**
HDMI 1.4b compliant connector for input source.
- 5-10 HDMI Output Control**
Manual control buttons for Preview/Live output selection.
- 11 Power LED**
The power LED light is on when main power is applied and the power switch is ON.
- 12 Power Switch**
Toggles power to the device.

Rear Panel Descriptions

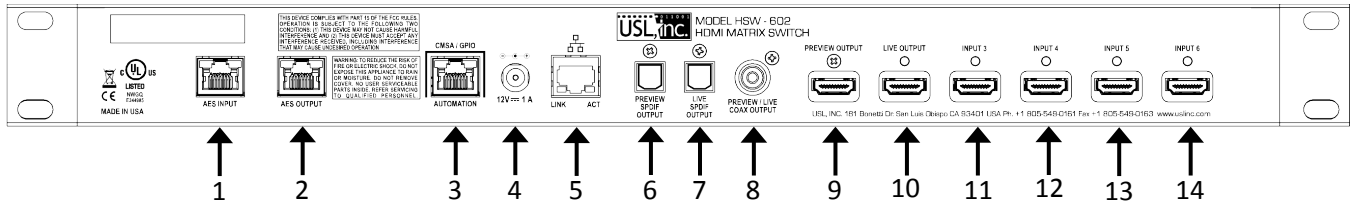


FIGURE 2 - HSW - 602 REAR PANEL

1 Digital AES/EBU Input

Accepts an AES/EBU Input that's routed to the AES/EBU Output (2) when powered down or in bypass mode. If the device is on and AES/EBU Input is desired, disable the *AES Audio* option in the Web Interface.

2 Digital AES/EBU Output

Will pass-thru the AES/EBU Input (1) when powered down or in bypass mode. Outputs the Live HDMI (10) source audio if powered on and **AES Audio** enabled through web interface.

3 CMSA/GPIO Automation

A future automation control port. Not currently supported.

4 Power Receptical

Accepts 12 Volt, 1 Amp DC power supply.

5 Network Connection

Ethernet port for network control of device from the Web Interface. TCP/IP commands are accepted through port 10001 on the Ethernet interface, and Telnet connections to port 23 are supported for live logging of operations

6 Preview S/PDIF Output

Two channel PCM audio or multi-channel bitstream audio S/PDIF output of the Preview source.

7 Live S/PDIF Output

Two channel PCM audio or multi-channel bitstream audio S/PDIF output of the Live source.

8 Preview/Live COAX Output

Two channel PCM audio or multi-channel S/PDIF over COAX output of the Preview source. (Preview/Live toggle support not currently supported)

9 Preview HDMI Output

HDMI output of the currently selected Preview source

10 Live HDMI Output

HDMI output of the currently selected Live source

11-14 HDMI Source Input

Additional HDMI 1.4b compliant connector for input source

2.0 Setup

Installation

The HSW-602 is a 1U rack mount device. The chassis is made to fit a 19-inch standard rack. The vent holes are located on the sides and should be provide 1 inch of clearance and airflow for proper cooling. It is designed to be stacked with other equipment in the rack.

- Attach the HSW into a 1U rack slot with the 4 mounting screws.

Please make sure the rack is fully grounded to avoid excess electrical noise.

- Attach the HDMI output cables to the HDMI sink devices.

The Live output is intended to connect directly to the main presentation device (projector), and the Preview output is intended to connect to a preview/check display.

- Connect HDMI input cables to appropriate channels.

There are 4 HDMI inputs on the back of the HSW, and 2 on the front for quick connections. Note that channels 1 and 2 are on the front, and the HSW will automatically connect to these on boot.

- Connect AES audio cable from the output on the HSW to a digital input on the sound processor.

- Connect AES Output of your Digital Cinema Server to AES input on the HSW-602

- Connect TOSLINK or Coaxial audio cables if they are to be used.

- Connect the XLR and Line In cables if they are to be used.

- Connect the provided power adapter and plug in to an outlet.

The included power adapter has multiple plug configurations for different electrical standards.

Locate on Network

The IP address of the HSW-602 will default to “169.254.***.0”, where *** is the last number of the S/N + 1. For example: the HSW with S/N “HSW-602-1223-6” will have a default IP address of 169.254.7.0. If this IP address is not available, the HSW will increment the last octet until finding a free IP address. You can put this IP into a web browser to view the Web Interface.

Note: The device must be powered and booted (15-30 seconds) to be accessible on the network.

The Ethernet Discover program will also be able to discover the HSW on your network. This program is available for download on USL's website (<ftp.uslinc.com>). Open the Ethernet Discoverer program and it will begin to scan for USL devices. Double click a discovered device to load its Web Interface in your default browser.

Some router configurations and Windows computers might not route to the default address automatically. If you cannot access the Web Interface using this IP address, you can use the Windows command line to add the routing needed (substitute your computers actual IP address in for "**IP_of_your_computer**"):

1. Open the start menu and enter **Command Prompt** in the search field.
2. Right click the **Command Prompt** icon that appears and select **Run as Administrator**.
3. On the command line enter the command:

```
route add 169.254.0.0 mask 255.255.0.0 IP_of_your_computer
```
4. Press enter and the command line will respond **OK**.

3.0 Operation

Turn on the device with the power switch on the front panel. When powered on, all lights on the front panel will turn on for several seconds. Afterward, the power light will remain on as the HSW boots. The HSW-602 will be now ready to use, with Live output defaulting to Input 1 and Preview defaulting to Input 2 on startup. The Ethernet and web services will be available several seconds after the device has finished booting.

Front Panel Controls

Pressing the corresponding buttons on the front panel of the HSW-602 can control the Live and Preview output sources. Note that both outputs cannot be set to the same input. Setting the Live output to a channel that the Preview is currently on will switch the two output's sources. An input cannot be assigned to the Live and Preview outputs at the same time.

Automation

The HSW-602 accepts Ethernet automation commands on TCP/IP communication on port 10001. The Ethernet commands can be used to automate HSW functionality with a digital cinema server that supports Ethernet automation. Source settings, status queries, and a limited number of CEC commands are available through these commands.

Delineate individual messages with a carriage-return line-feed character after each. This is commonly represented as "`\r\n`" or "`\x0A\x0D`" at the end of each line.

There are 2 types of HSW TCP/IP commands: queries and assignments. One command can be used for either type, with an “=” designating an assignment command and requiring a value after. The HSW-602 commands formatting can be seen below.

hsw.subsystem.command=value

If a **value** is not present, the HSW-602 will return the current state of **command**.

Examples:

To find the currently selected Live channel, send the HSW the following command:

hsw.live.source\x0a\x0D

This will return a value from 0-5 indicating which input is currently being passed to the Live output. To set the Live output to a different source, send the command:

hsw.live.source=3\x0a\x0D

This will set the live source to channel 4. Note that source channels in the Ethernet commands are 0 referenced.

The full listing of TCP/IP automation commands is available in [Appendix A](#)

4.0 Web Interface

The HSW-602 Web interface provides expanded control of the device as well as setup and configuration. With the HSW powered on and connected to your computer or network, access the device directly using a web browser. Enter the IP address of the HSW-602 into the address line of the web browser to show the web interface. The web interface will show in full or mobile mode based on the size of the window it is displayed in.

http://ip_address_of_the_switch

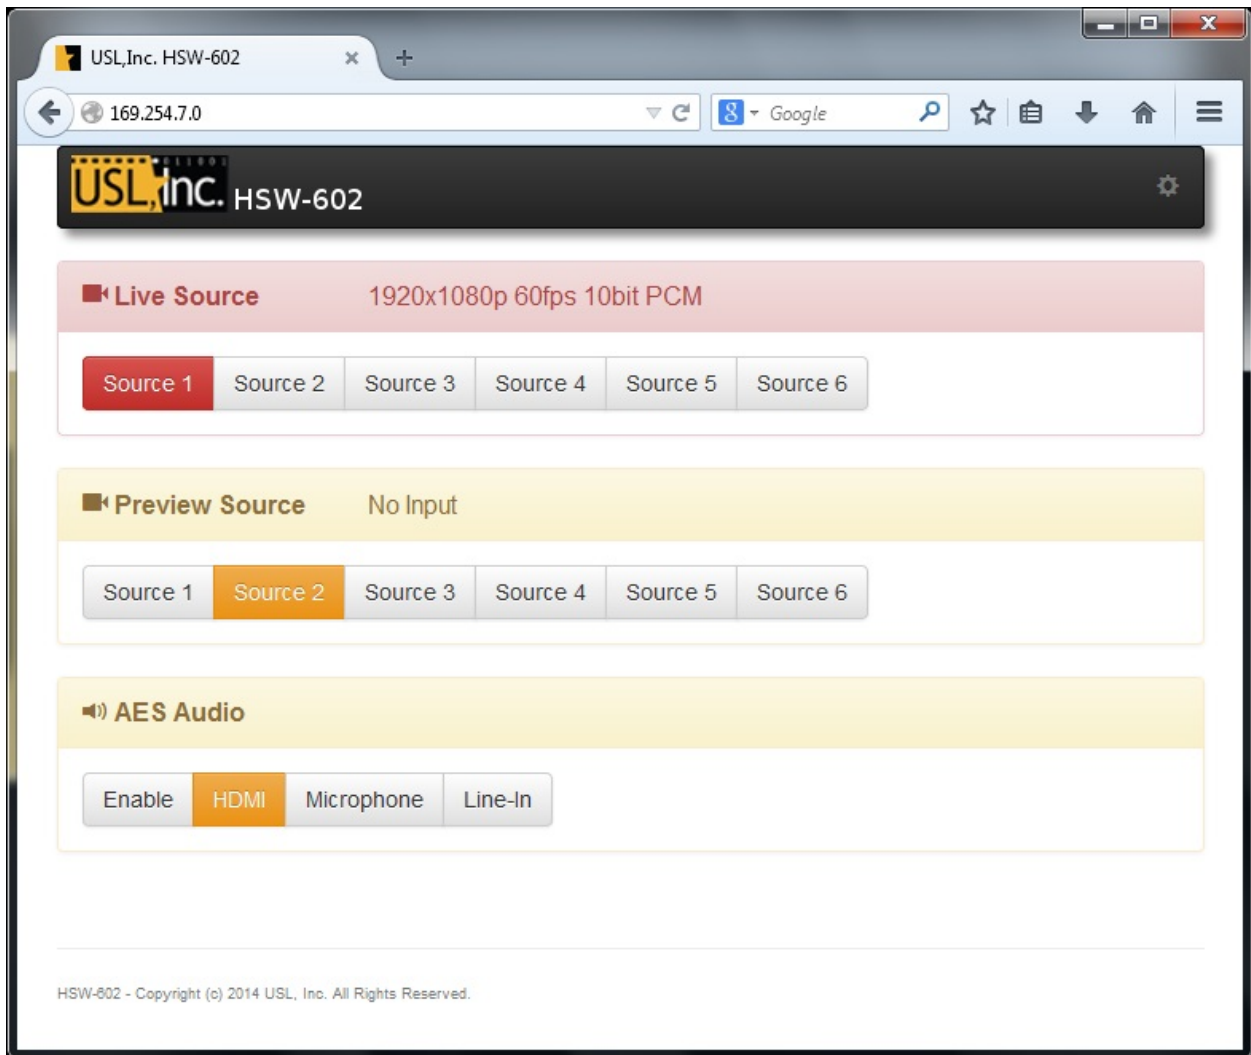


FIGURE 3 - WEB INTERFACE

Input Control

The HSW-602 Web Interface home page allows for controlling the channel selection for both the Live and Preview outputs. To change the channel, simply click the button you wish each output to display. When using the web interface, click the USL logo in the upper left corner to return to this home page.

In Figure 4 shown below, HDMI Input 2 (Source 2) will be fed to the Live HDMI Output and HDMI Input 4 (Source 4) will be routed to the Preview HDMI Output.

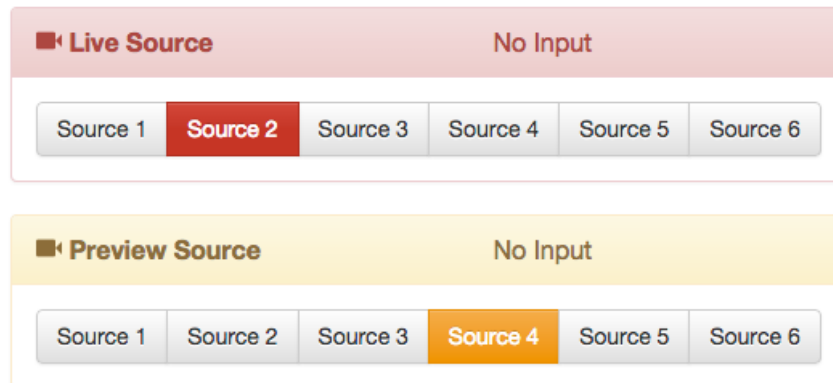


FIGURE 4 - SOURCE SELECTION CONTROL

AES Audio Mixing

AES audio output is controlled from third set of buttons on the home page. When the **Enable** button is unselected, audio from the AES input is passed through to the AES output. The device defaults to this setting on boot and when powered off.

Selecting the **Enable** button will activate the AES mixer in the HSW-602 and disable any audio coming in from the AES/EBU RJ45 input port. The **HDMI**, **Microphone**, and **Line-In** buttons configure how audio is mixed by the HSW-602. When enabled, the audio from the Live HDMI source routed to the AES output.

Selecting **Microphone** or **Line-In** will overlay audio from that selection onto the HDMI Live audio to the AES output. Gain control sliders allow for level control of that input. Clicking **HDMI** will turn off the overlay and return to only HDMI audio. Note that only one overlay source (Microphone or Line In) can exist at a time.

For more detail on audio routing in the HSW-602, refer to [Figure 10 in Appendix B](#).

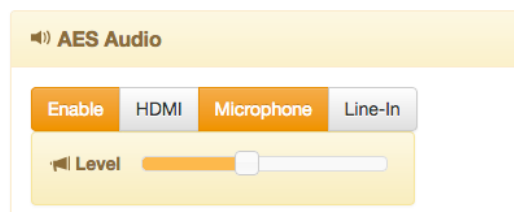


FIGURE 5 - MIC OVERLAY ON HDMI

Settings

Select the gear icon in the upper right corner of the Web Interface to access the settings pages.

Labels

The Labels page under the settings allows for renaming the buttons for each input channel on the Web Interface. Change these names to more easily identify sources while switching. The save button at the bottom will show confirmation when the changes are saved to memory.




FIGURE 6 - MAKING LABELS

Network

The Network settings menu is available to the user if the device needs additional configuration to work on the network.

Choosing **Yes** to DHCP will allow the device to be dynamically assigned an IP address by the network DHCP server. Note that IP addresses assigned by a DHCP server may not be static and could unexpectedly change. Choosing **No** will allow the user to pick an IP address, subnet mask, and default gateway appropriate to the network's configuration.

Press the save button and the web page will confirm when settings have been saved to memory. IP address changes will take effect after the next reboot of the device.

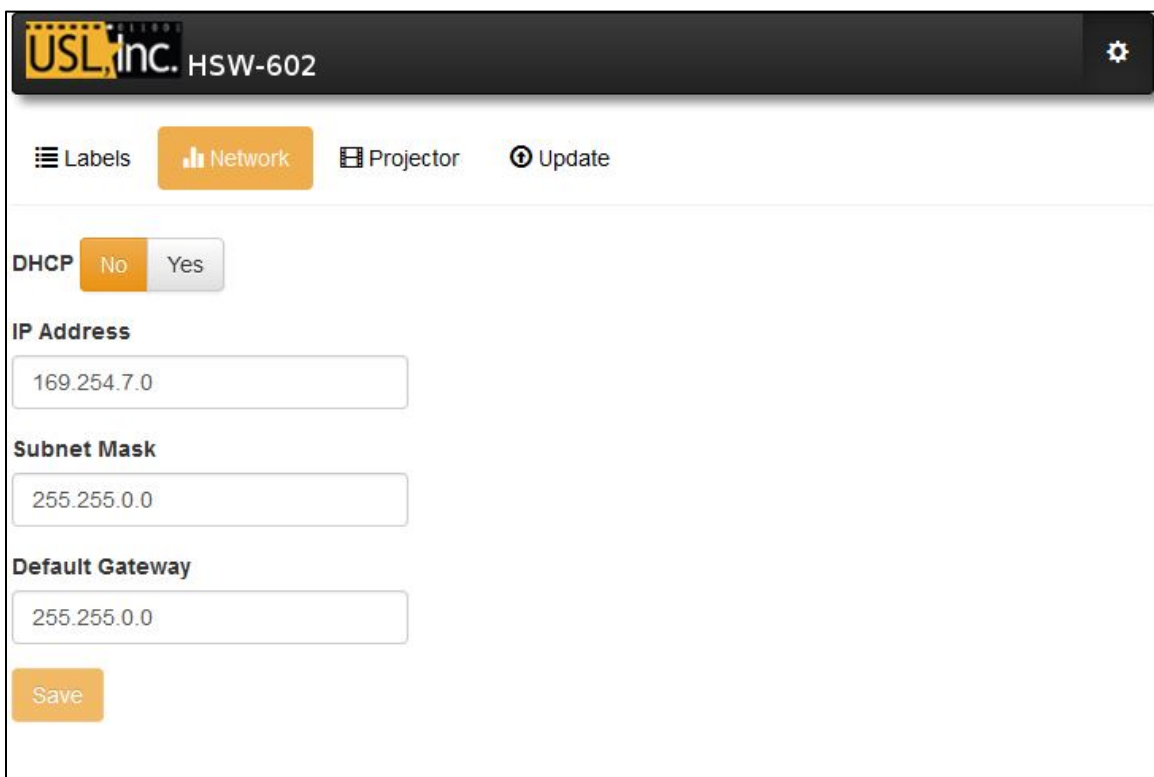

The screenshot shows the network configuration page for a USL, Inc. HSW-602 device. The page has a dark header with the device name and a settings gear icon. Below the header is a navigation bar with buttons for 'Labels', 'Network' (highlighted in orange), 'Projector', and 'Update'. The main content area features a 'DHCP' section with 'No' and 'Yes' radio buttons, where 'No' is selected. Below this are three text input fields: 'IP Address' containing '169.254.7.0', 'Subnet Mask' containing '255.255.0.0', and 'Default Gateway' containing '255.255.0.0'. A 'Save' button is located at the bottom left of the form area.

FIGURE 7 - NETWORK CONFIGURATION

Projector


These settings allow the HSW-602 to communicate with a digital cinema projector. If the projector is accessible through the network, the HSW-602 will enable ICP blanking, showing a blank screen when the HSW is switching between HDMI outputs.

To enable or disable the projector blanking, click **Yes** or **No** for the Enabled setting. Enter the IP address of your projector once enabled, and set the number of seconds **Duration** you want the image to blank during each switch. Press the **Save** button and the Web Interface will confirm when the settings have been saved to the memory of the HSW-602.

The blanking can be configured to make clean transitions between content during presentations. Please note that projector blanking will be done every time the Live output on the HSW-602 is switched between different channels. The blanking done by the HSW is with the ICP of the projector, and not the dowsler. The HSW can still blank the projector image when a different input on the projector is being used, such as a Media Block. If the HSW is moved between auditoriums, it can still blank the image on the previous projector until the projector IP setting on the HSW has been reconfigured, or blanking disabled.

To find the best blanking time:

1. Disable Projector blanking on the HSW.
2. Setup 2 inputs on the HSW with different types of connections, such as a 1080p 60Hz source with 5.1 audio, and a 720p 24Hz source with 2 channel audio.
3. With the projector showing the image on screen from the Live output, switch the source between the two.
4. Time how long it takes from button push until good stable image shows on screen.
5. Round up to the next whole number and set the Duration to that many seconds.

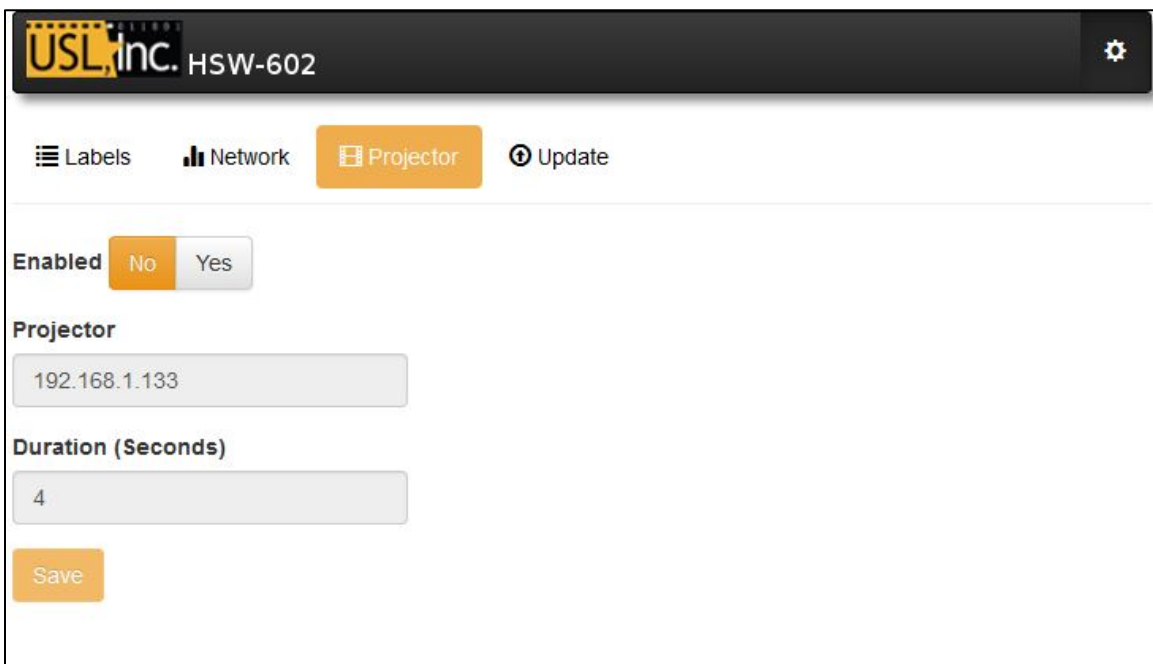

The screenshot displays the web interface for the HSW-602. At the top, the header shows 'USL, Inc. HSW-602' and a settings gear icon. Below the header, there are navigation tabs: 'Labels', 'Network', 'Projector' (which is highlighted in orange), and 'Update'. The 'Projector' section is active, showing an 'Enabled' toggle with 'No' selected. Below this, there are two input fields: 'Projector' with the value '192.168.1.133' and 'Duration (Seconds)' with the value '4'. A 'Save' button is located at the bottom of the configuration area.

FIGURE 8 - PROJECTOR CONFIGURATION

Update

Current firmware revisions are listed at the top of the Update page. When a newer firmware version is available, follow the update procedure:

1. Download the update file from USL to your computer.
2. Click the **Choose File...** button to open a file dialog.
3. On the file dialog find the saved file and click **Open**.
4. The Web Interface will show the name of the selected file.
5. Click **Update**.
6. Wait for all the steps of the update process to complete.

Once all steps have turned green, the HSW-602 is ready to use. Refresh the Web Page to see the new firmware version.

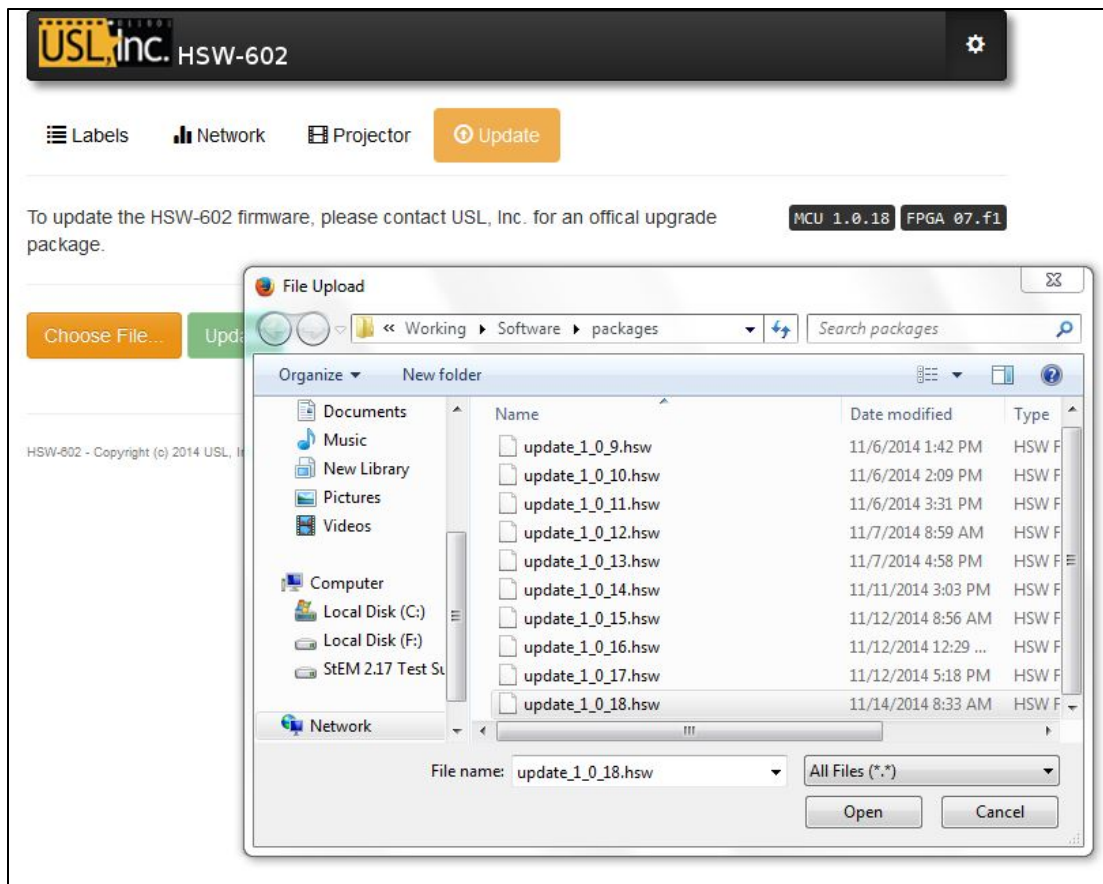


FIGURE 9 - FIRMWARE UPDATE

Restore Factory Settings

The HSW-602 can be returned to factory settings. To reset the settings:

1. Turn off the HSW.
2. Hold both the **HDMI 6 Live** and **HDMI 6 Preview** buttons down.
3. Turn on the HSW.
4. All the LEDs will light, then the red and yellow LEDs will begin flashing alternately. You can now release the HDMI 6 buttons.
5. The HSW will boot as normal, with the configuration reverted.

The firmware version will remain the same. Link Local dynamic IP address will be restored, and revert to the default IP.

5.0 Product Support

Live Logging

The HSW-602 has a live log available for access. To view the non-interactive live logs, open a terminal program and connect via telnet to port 23. The HSW will display information that can be forwarded to USL to help diagnosing any issues encountered.

Contact USL

USL proudly stands behind its products. We are ready to answer questions about the installation or operation of the HSW-602. The manual, application notes and other documents are available on our website. You may contact USL by:

Phone: +1 (805) 549-0161

Email: support@uslinc.com

File a support ticket electronically at: www.uslinc.com/support

Please check the USL website for the latest software updates for the HSW-602.

www.uslinc.com

USL is interested in your comments. Please feel free to contact us with any comments or suggestions.

USL One Year Limited Warranty

USL, INC. warrants that each product manufactured by it will be free from defects in material and workmanship under normal usage over a period of one (1) year after its purchase new from and authorized dealer. Our obligation under this warranty is limited to repairing or replacing any product or component which we are satisfied does not conform with the foregoing warrantee and which is returned to our factory freight paid, or serviced by one of our authorized contractors. The forgoing warranty is exclusive and in lieu of all other warranties, whether expressed or implied. Such warranty shall not apply to any product or component (A) repaired or altered by anyone other than USL, Inc. or an authorized service contractor; (B) tampered with or altered in any way or subjected to misuse, negligence or accident or (C) which has been improperly connected, installed or adjusted other than in accordance with USL, Inc.'s instruction.

Appendix A – Automation Commands

The following commands can be sent to the device by TCP/IP ASCII strings on port 10001 or through a telnet session to the same port. Individual commands should be terminated with a carriage return line character, often shown as “\r\n” or “\x0A\x0D”. The terminal will accept commands in the communication format:

hsw.sys.subsystem.command=value

System Commands

Command	Assign/Query	Value	Description
hsw.sys.store	Yes	1	Saves current configuration to flash storage on the HSW. Both hsw.sys.store and hsw.sys.store=1 will execute the save.
hsw.sys.source0.name hsw.sys.source1.name hsw.sys.source2.name hsw.sys.source3.name hsw.sys.source4.name hsw.sys.source5.name	Yes	String	Query or assign the channel name for HDMI inputs 0-5. Inputs are 0 referenced. The names will be shown in the Web Interface.

Switching Commands

hsw.live.source	Yes	0-5	Assign the Live output to the specified input channel. Inputs are 0 referenced (assigning 0 will activate input 1).
hsw.preview.source	Yes	0-5	Assign the Preview output to the specified input channel. Inputs are 0 referenced (assigning 0 will activate input 1).

Audio Commands

hsw.audio.source	Yes	0-2	Select the source to mix to the AES audio output. Assign or query values: 0 – None 1 – Microphone 2 – Line In
hsw.audio.outputen	Yes	0 or 1	Enable the AES audio output. Assign to 1 to set HDMI audio to play on AES Out and mix the assigned audio source. Set to 0 to have the AES audio pass through the AES In audio.

System Information Commands

hsw.sys.board.revision	Query Only	String	Returns current HSW-602 hardware revision version.
hsw.sys.board.temperature	Query Only	Float	Current board temperature in degrees Celsius.
hsw.sys.sw.version	Query Only	String	Returns the current HSW-602 software revision version.

Network Configuration Commands

hsw.sys.ip.dhcp	Yes	0 or 1	Enable or disable use of Dynamic Host Configuration Protocol. When enabled, if no DHCP server is found within 5 seconds of boot an IPv4 link local address will be assigned.
hsw.sys.ip.address	Yes	IP String	Assign or Query the static IPv4 address to be used when DHCP is disabled.
hsw.sys.ip.subnet	Yes	IP String	Assign or Query the IPv4 subnet mask to be used when DHCP is disabled.
hsw.sys.ip.gateway	Yes	IP String	Assign or Query the IPv4 default gateway to be used when DHCP is disabled.

Projector Configuration Commands

hsw.sys.projector.enable	Yes	0 or 1	Enable or disable digital cinema projector communication.
hsw.sys.projector.address	Yes	IP String	Assign or query the IPv4 address of the projector the HSW-602 will communicate with.
hsw.sys.projector.duration	Yes	Integer	Number of seconds the HSW-602 will blank the projector output during a Live output channel switch.
hsw.sys.projector.blank	Yes	0 or 1	Manual send the command to blank the projector output. 0 – Disable blanking (show image). 1 – Enable blanking (mute image).

CEC Commands

hsw.cec.play	Yes	None	Sends CEC PLAY command to current Live Source
hsw.cec.pause	Yes	None	Sends CEC STILL command to current Live Source
hsw.cec.stop	Yes	None	Sends CEC STOP command to current Live Source
hsw.cec.fwd	Yes	None	Sends CEC SEEK FORWARD command to current Live Source
hsw.cec.rev	Yes	None	Sends CEC SEEK REWIND command to current Live Source
hsw.cec.eject	Yes	None	Sends CEC EJECT command to current Live Source
hsw.cec.standby	Yes	None	Sends CEC STANDBY command to current Live Source
hsw.cec.standbyall	Yes	None	Broadcasts CEC STANDBY command to CEC bus
hsw.cec.resume	Yes	None	Sends CEC PLAY command to current Live Source (will wake device). Behavior varies per device.


Appendix B – Audio Connector Pinouts

RJ-45 AES Input/Output

The HSW-602 uses the StudioHub pin out for AES/EBU over CAT5 or CAT6 Ethernet cable. These cables are twisted pair and have the required characteristic impedance. Each RJ-45 connector carries up to 8 digital audio channels.

Audio Channels	AES Pair	Top RJ-45 Pins (+, -)
1, 2	1	1, 2
3, 4	2	3, 6
5, 6	3	4, 5
7, 8	4	7, 8

TABLE 2 - RJ45 AES PINOUT

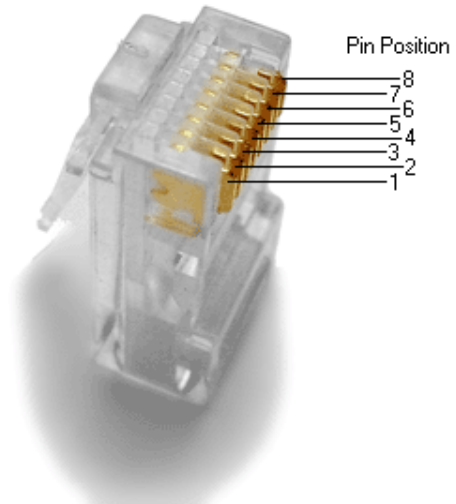

Audio Routing

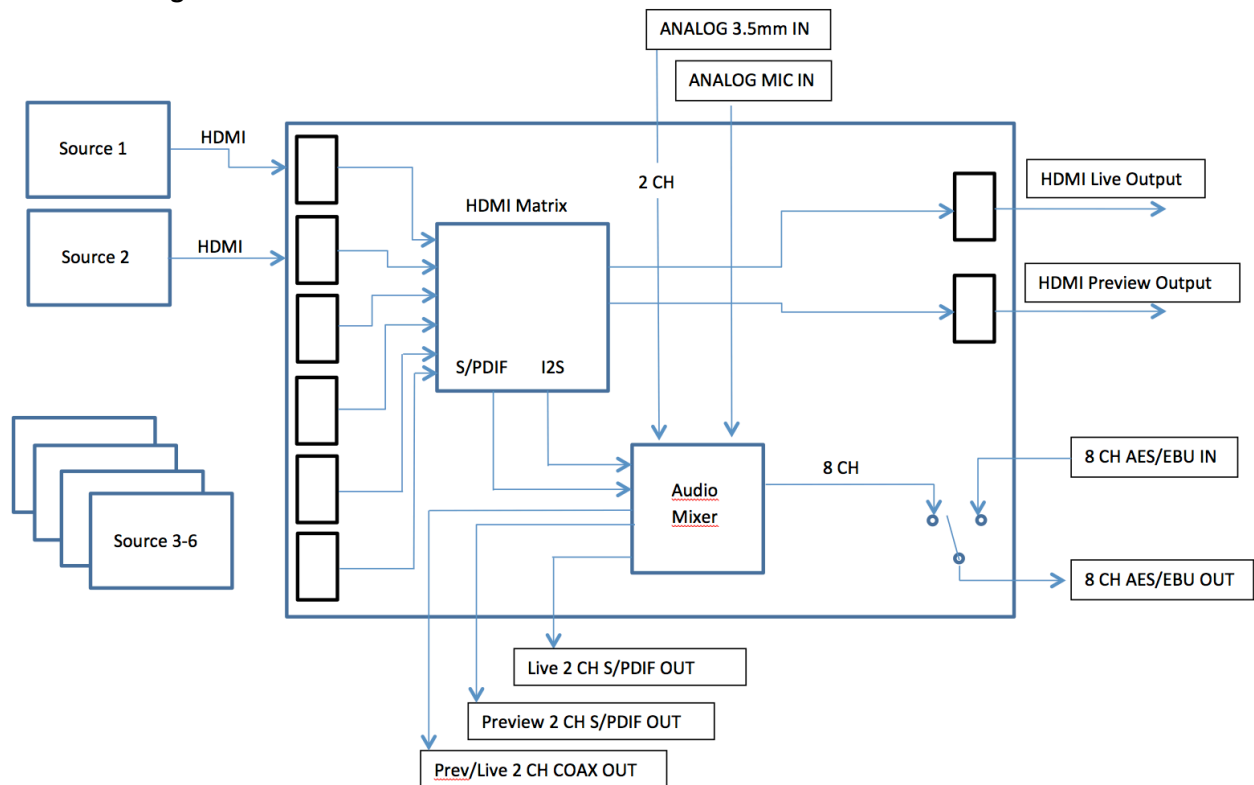


FIGURE 10 - AUDIO ROUTING DIAGRAM

Appendix C – GPIO Pinout

GPIO implementation planned for future use.

